



# CURV Lite Restaurant Installation and Set up Guide

CURV LITE

# A920Pro



## A920Pro Power Connection

**Step 1:** Once you have received your equipment, locate the power cables included in the package.

**Step 2:** Connect the USB to the power block and connect it to a power supply. Attach the power cable USB-C side of cable to the A920Pro.

**Step 3:** Press and hold the power button located on the right side of the machine. The screen will light up and boot up the machine. Allow machine to charge to at least 15% before continuing.

## Connecting to the Internet

A920Pro is a wireless terminal and can be connected to the internet with Wi-Fi or cellular 4G connection. Follow the steps below to configure internet connection with Wi-Fi.



- Step 1. Select Settings ICON.
- Step 2. Input Admin settings Password: pax9876@@
- Step 3. Select WLAN and select Wi-Fi toggle on. Select network and enter password.

 


- Step 4. Confirm Wi-Fi is connected by checking for the Wi-Fi service Icon on the top right of the user screen.


\*Please call CURV Support if using 4G connectivity\*

## Configure receipt printer and open drawer to start processing


- Step 1.  
Select the CURV application.  
Use account credentials to log in.

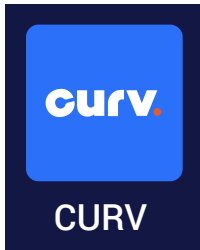

 - Step 2.  
Select CURV Settings.

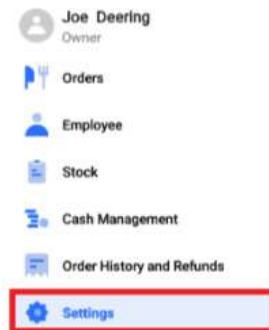

 - Step 3.  
Select Printer.

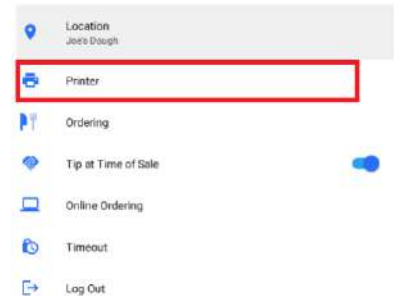

- Step 4.  
Select Printer from the manage Printer list. Configure the correct name and attach a cash drawer.

A Cash Drawer Name and Starting Cash Balance is required to open a drawer.

**Edit Printer Details** ✕

Please fill in information about your printer and cash drawer

Printer Name  
Test 123

 
Printer Location  
1

☒ Cash Drawer Attached



Cash Drawer Name  
Test 1

Starting Cash Balance  
\$ 100.00

- Step 5.  
Attach the updated receipt printer that was configured.  
Select Receipt Printer under the settings.

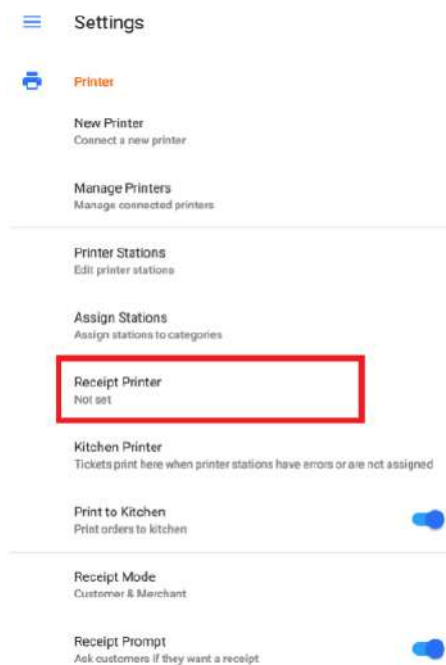

  - Step 6.  
Confirm the correct Printer/Cash Drawer combination is selected by viewing the name in the Receipt Printer section.

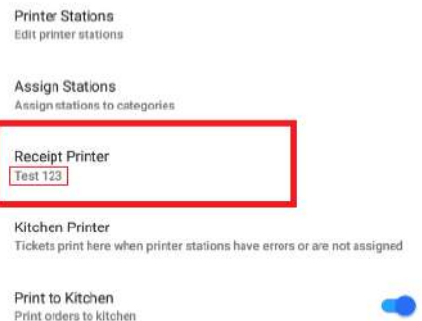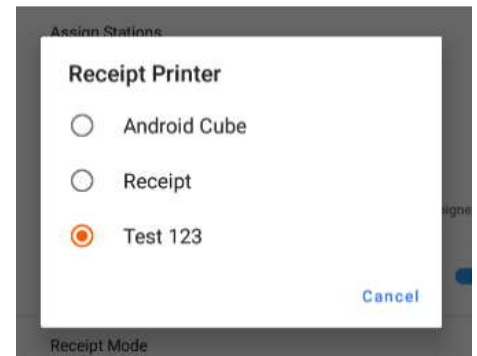

Identify Printer

Delete Save

Open Cash Drawer to start processing card and cash payments

 
 
 
- Step 1.

Navigate to the Cash Management section on the navigation bar.
- Step 2.

Select Open Drawer. Please note the drawer name will correspond to the configured printer and attached cash drawer.
- Step 3.

Enter the actual cash amount. This should match the expected cash amount.

(Cash expected cannot be edited upon opening)

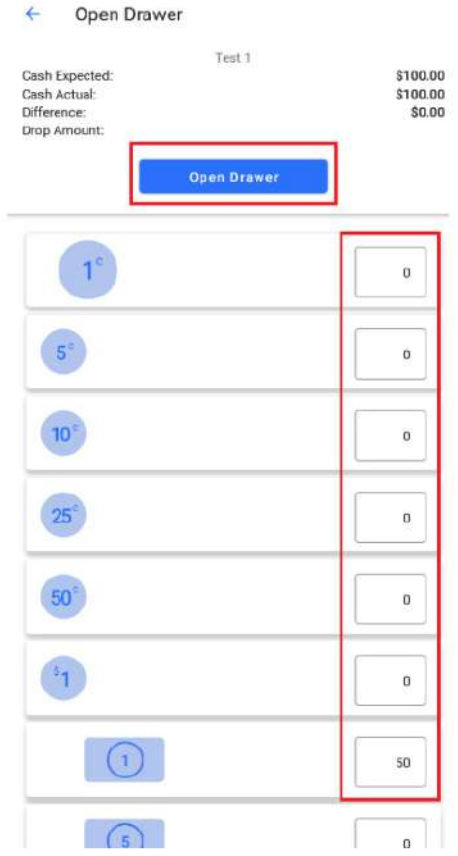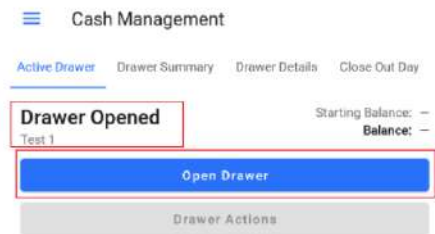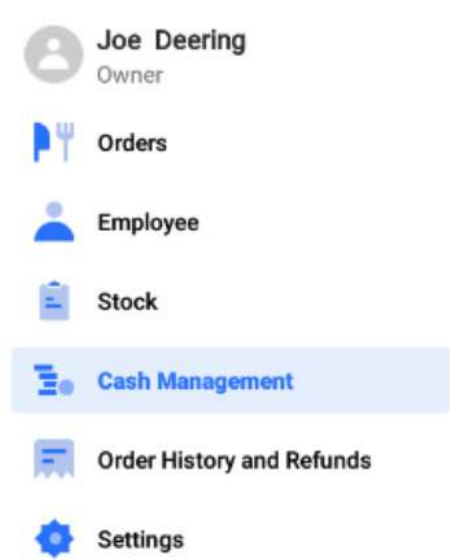

CURV LITE

# AMP 8200



## 8200 CURV Lite Power Connection

**Step 1:** Once you have received your equipment, locate the power cables included in the package.

**Step 2:** Connect the power cable to a power supply and attach the Micro-USB side of cable to the charging port of the AMP 8200.

**Step 3:** Press and hold the power button located on the top right side of the machine. The screen will light up and boot up the machine. Allow machine to charge to at least 15% before continuing.

## Connecting to the Internet

8200 is a wireless terminal and can be connected to the internet with Wi-Fi connection only.



- Step 1. Select Settings ICON.
- Step 2. Input Admin settings Password: 1234567
- Step 3. Select WLAN and select Wi-Fi toggle on. Select network and enter password.



- Step 4. Confirm Wi-Fi is connected by checking for the Wi-Fi service Icon on the top right of the user screen.

 


- Step 5. Select AMP TSYS applications. This application will need to be initialized before payments can be made. This can take a few minutes. Once initialized, close app and leave running in the background.




## Configure receipt printer and open drawer to start processing


- Step 1.  
Select the CURV application.  
Use account credentials to log in.

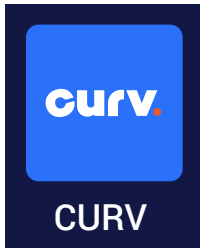

 - Step 2.  
Select CURV Settings.

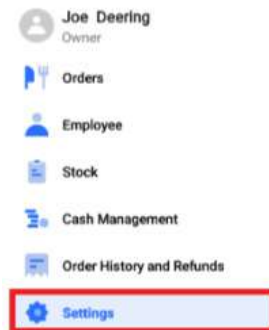

 - Step 3.  
Select Printer.

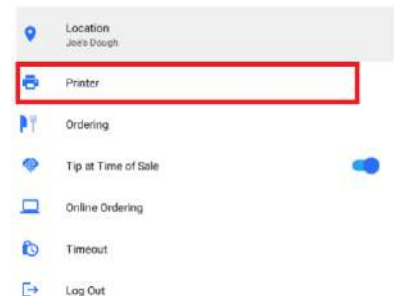

- Step 4.  
Select Printer from the manage Printer list. Configure the correct name and attach a cash drawer.

A Cash Drawer Name and Starting Cash Balance is required to open a drawer.

**Edit Printer Details** ✕

Please fill in information about your printer and cash drawer

Printer Name  
Test 123

 
Printer Location  
1

☒ Cash Drawer Attached



Cash Drawer Name  
Test 1

Starting Cash Balance  
\$ 100.00

- Step 5.  
Attach the updated receipt printer that was configured.  
Select Receipt Printer under the settings.

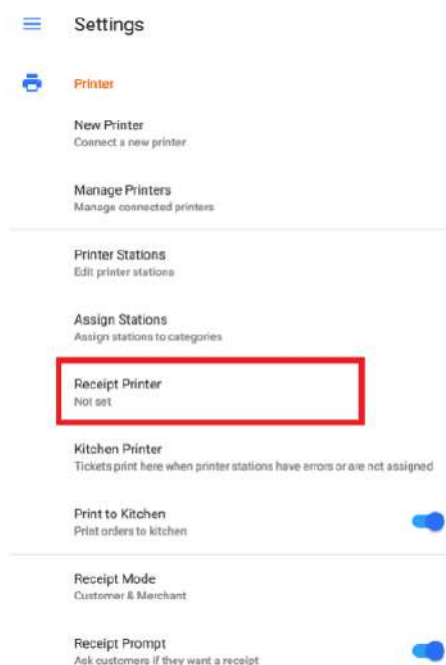

  - Step 6.  
Confirm the correct Printer/Cash Drawer combination is selected by viewing the name in the Receipt Printer section.

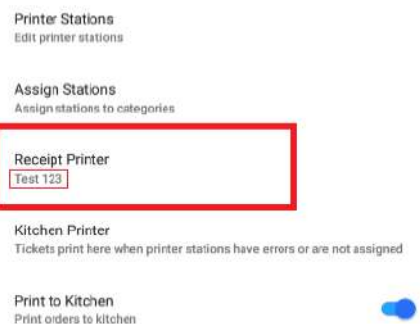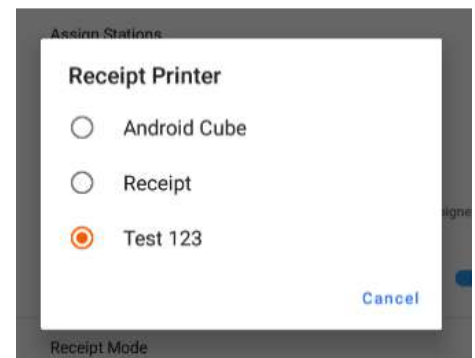

Identify Printer

Delete Save

Open Cash Drawer to start processing card and cash payments

 
 
 
- Step 1.

Navigate to the Cash Management section on the navigation bar.
- Step 2.

Select Open Drawer. Please note the drawer name will correspond to the configured printer and attached cash drawer.
- Step 3.

Enter the actual cash amount. This should match the expected cash amount.

(Cash expected cannot be edited upon opening)

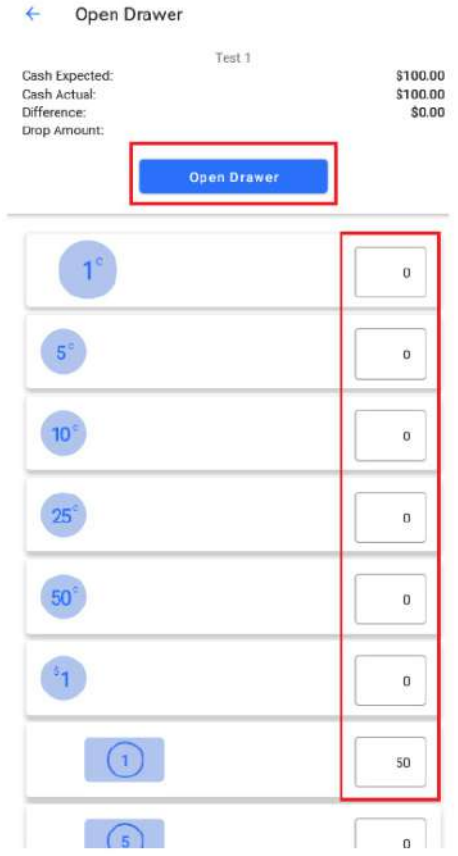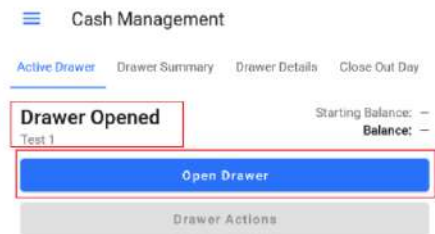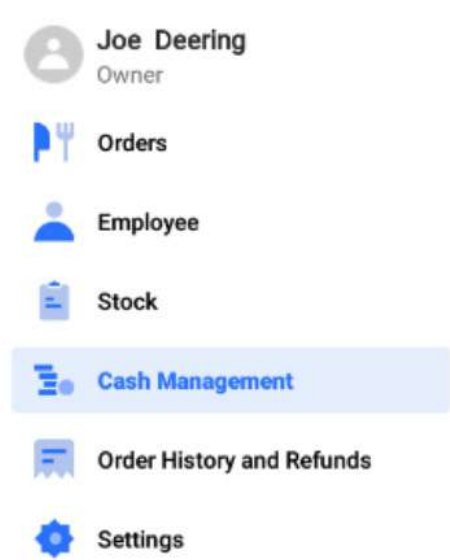



To learn more, please contact PAYARC support.

Support Phone - (877) 203-6624

Support Email - [support@payarc.com](mailto:support@payarc.com)

**payarc**